



 
PINNACLE™
STORAGE PRODUCTS

www.pinnaclestorageproducts.com


Thank you for selecting Pinnacle Lockers. We are confident that the quality and construction of our lockers will prove to be a good investment.

These instructions are intended to assist you in a locker installation. Individual job conditions will dictate the type of fasteners and whether the lockers must be anchored to the wall, the floor, or both.


1. Stand pre-assembled groups in place. Square up units with shims placed under back legs.
2. Bolt units together using nuts and bolts provided. End units holes can be filled with the same nuts and bolts.
3. End lockers plus intermediate lockers to be anchored to wall on 36" centers MAX. Free standing lockers must be anchored to the floor through the rear legs or bottom shelf. (If your lockers do not have legs Installer must use blocking under bottom shelf to fill void at bottom of locker.)

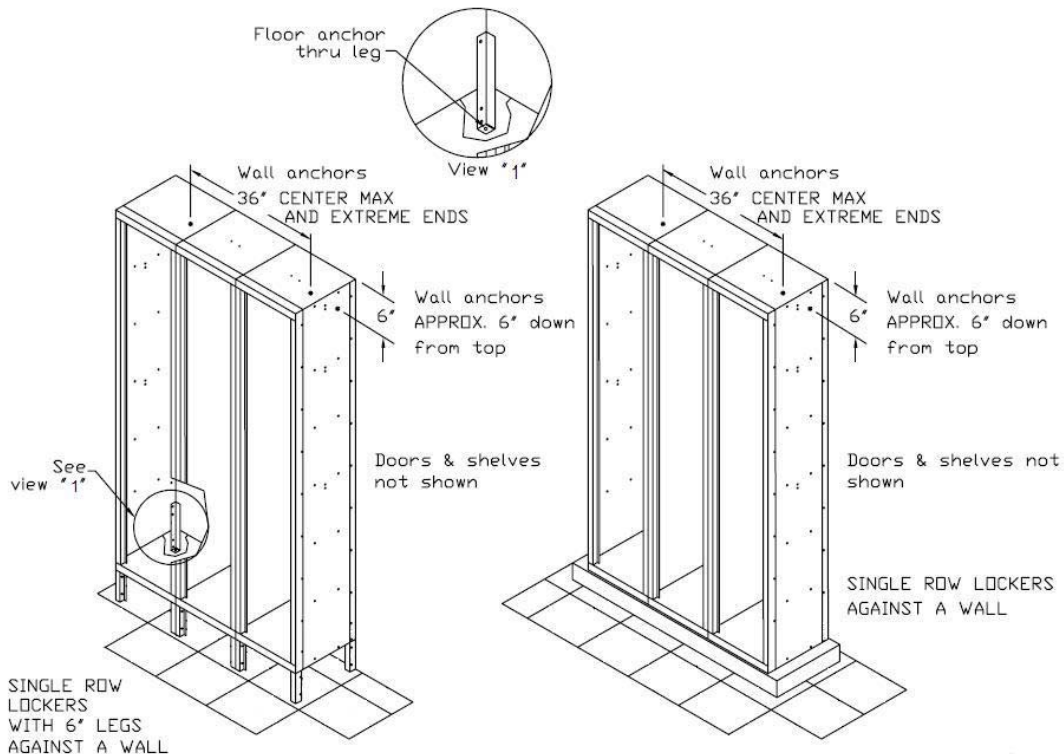


PINNACLE
STORAGE PRODUCTS
www.pinnaclestorageproducts.com

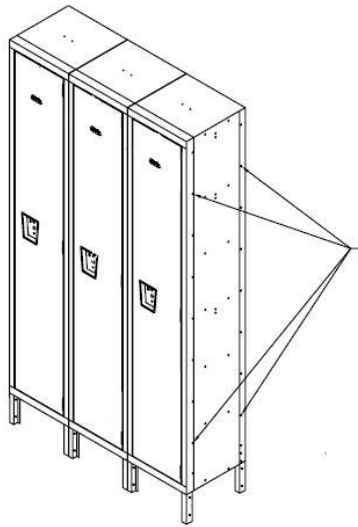

Fasten assembled sections from holes in frame and back panels. May require removal of nut and bolt/rivet if lockers were pre-assembled at factory.

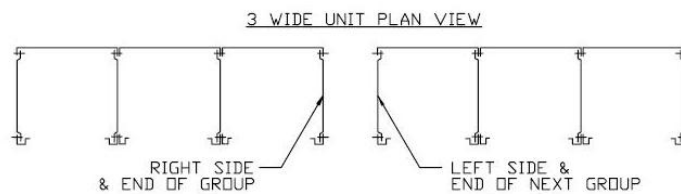

Notes:

When lockers are set in place, care must be taken to assure lockers are set plumb and true before anchoring.

Lockers are not designed as free-standing structures. Lockers must be anchored securely to walls and/or floors with fasteners. **WARNING:** Failure to properly anchor lockers could cause them to topple.

Adjust all doors to operate freely if required.

If built-in locks are installed, make certain locks operate properly before closing doors.

Warning:

Floor Anchors must have a min. pull-out rating of 190 lbs.

Wall Anchors must have a min. pull-out rating of 150 lbs.

Anchors supplied by others.